
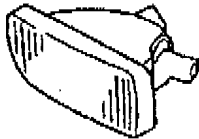


PUB No. Title  
AI B1116547 CORNERING LIGHTS


 <b>INSTALLATION INSTRUCTIONS</b>	Accessory <b>CORNERING LIGHTS</b> P/N: 08V34-SP0-200	Application 1994 - 95 LEGEND	Publications No. B11 16173-16547
			Issue Date <b>SEP 1994</b>

**PARTS LIST**


Right cornering light



Left cornering light

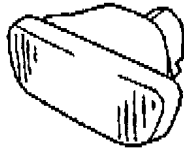

Right trim

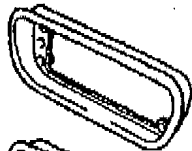

Left trim



2 Rear brackets




2 Front brackets



Control unit




Wire harness

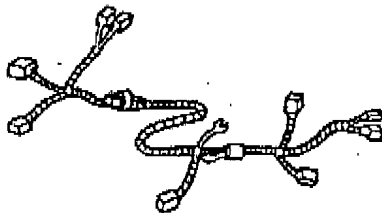


Control unit stay



Template

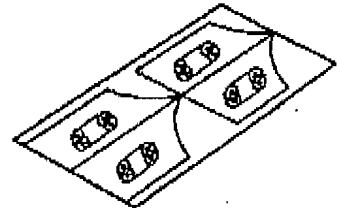

10 Wire ties

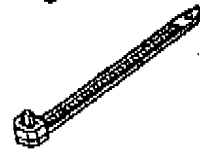

Ground bolt (6 x 12 mm)



8 Screws (4 x 12 mm)



2 Self-tapping screws (4 x 25 mm)



Flange bolt (6 x 20 mm)



Flange nut (6 mm)



Washer-bolt (8 x 14 mm)



PUB No. Title  
AI B1116547 CORNERING LIGHTS

Issued  
09/01/1994

## TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver  
10 mm Combination wrench  
Utility knife  
Hacksaw blade  
Flat tip screwdriver  
Eye protection (face shield, safety goggles, etc.)  
Hole saw (40 mm)  
Drill  
Adhesive tape  
Pushpin

## INSTALLATION

### Before You Begin:

- Write down the customer's radio station presets; the radio memory will be erased when you disconnect the battery.
- If the radio has a coded theft protection circuit, be sure you have the anti-theft code before you disconnect the battery.

*Illustration of the Cornering Lights Installed on the Car*

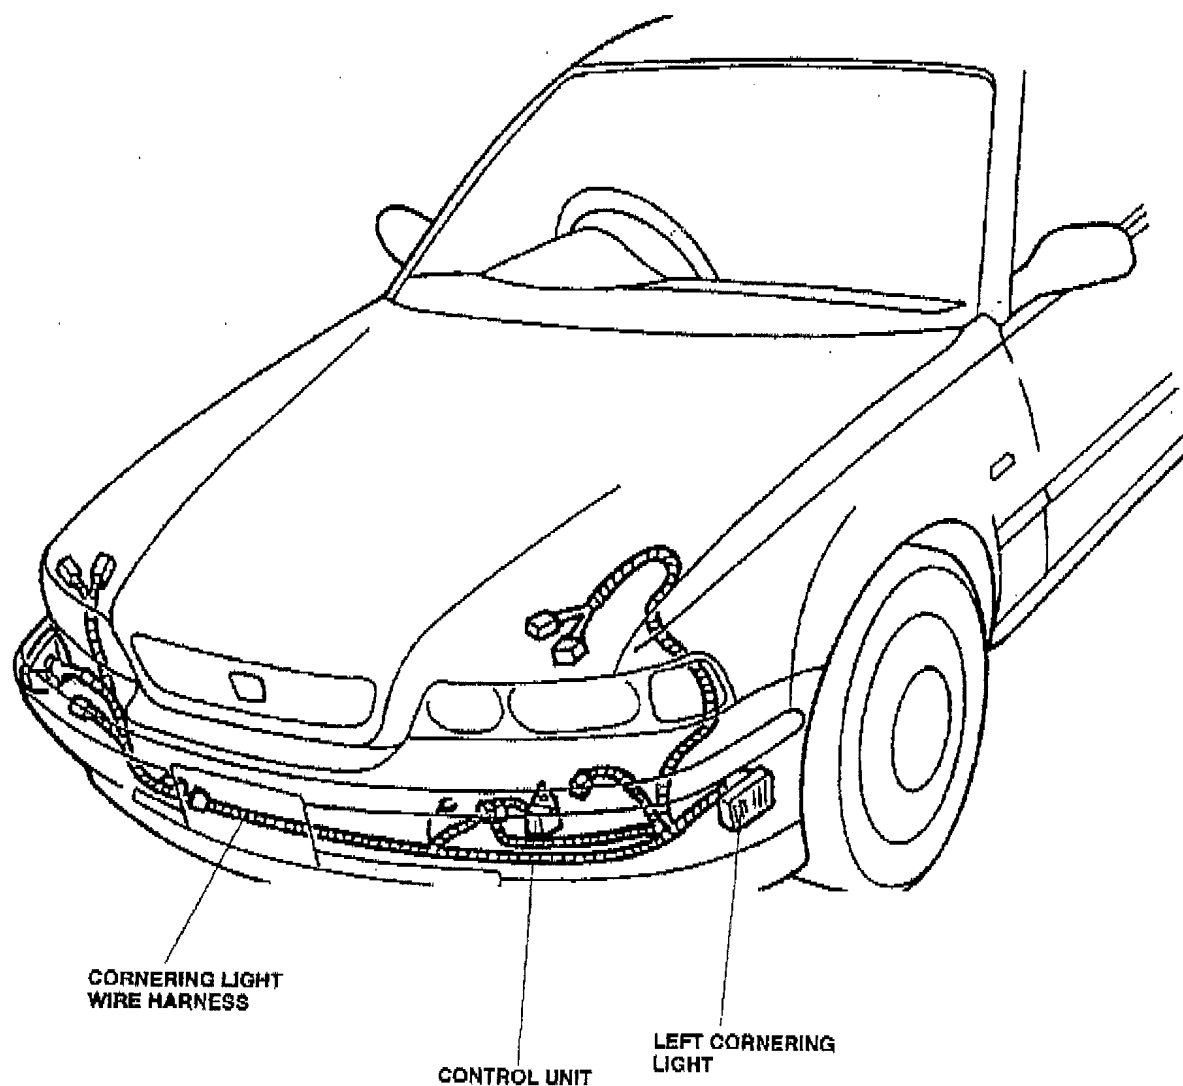


PUB No. Title  
AT B1116547 CORNERING LIGHTS


Issued  
09/01/1994

1. Disconnect the negative cable from the battery.
2. Remove the grille covers by inserting the end of a flat tip screwdriver between the cover and the grille and then prying the cover up in the direction shown.


4-Door Model:

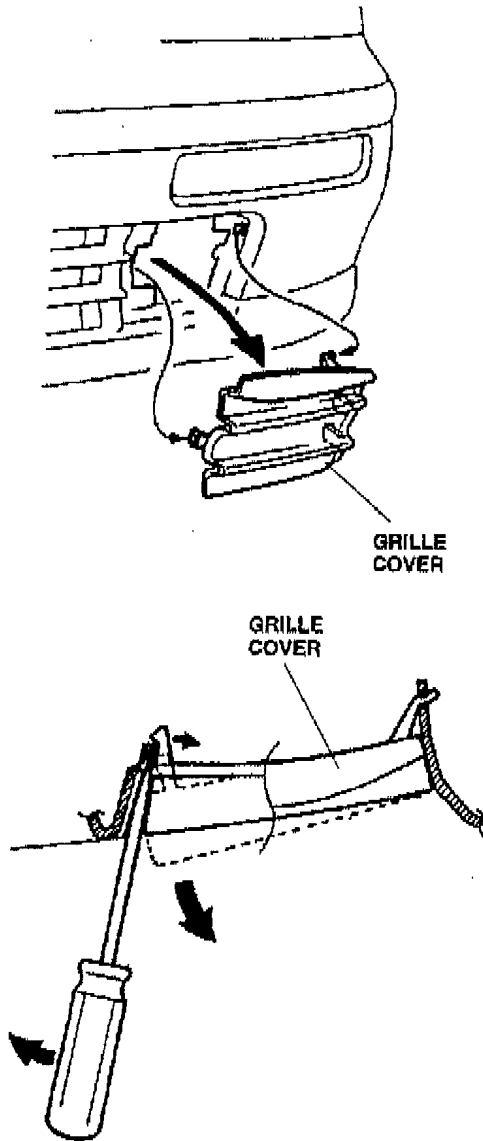

2-Door Model:

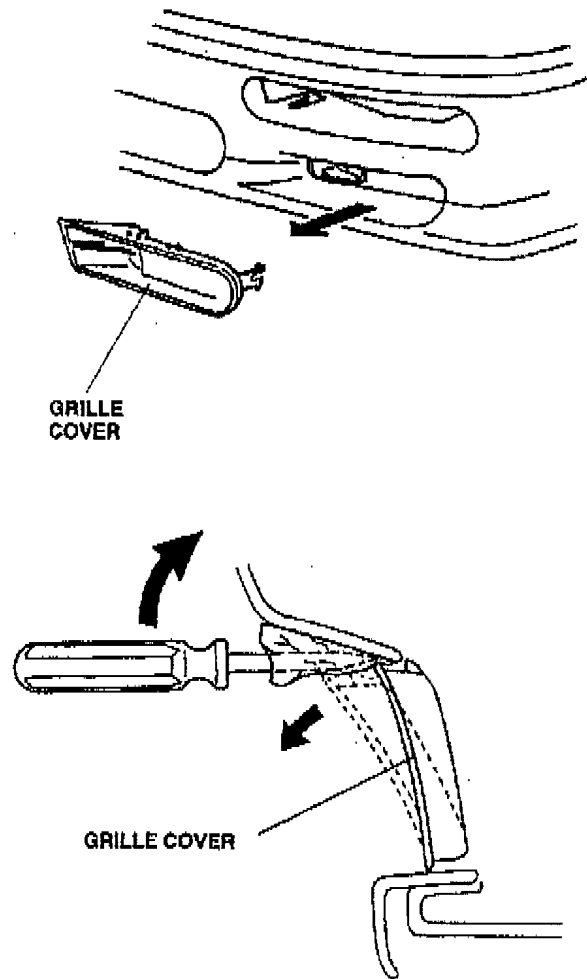


3. Remove the turn signals.

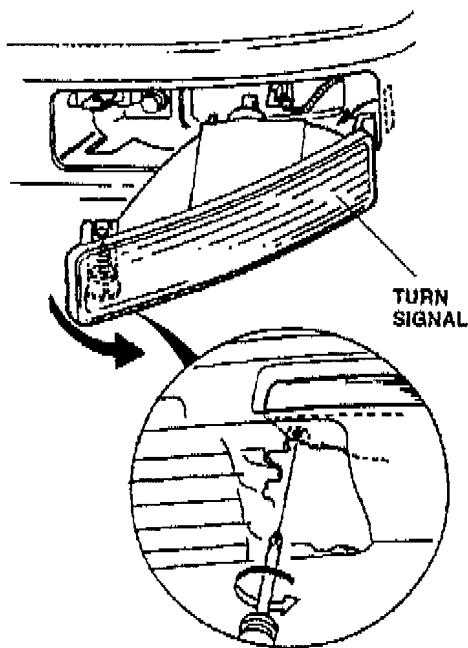

NOTE:

The kit includes four templates: two for the 4-door model and two for the 2-door model. Before attaching the templates, be sure you have the correct templates for the car you are working on.


4. Tape the template at the upper edge of the front bumper, and mark the bumper at the center of each of the four circles with a pushpin. Using a utility knife, cut out the outer edge of the template on the bumper. Repeat on the other side.

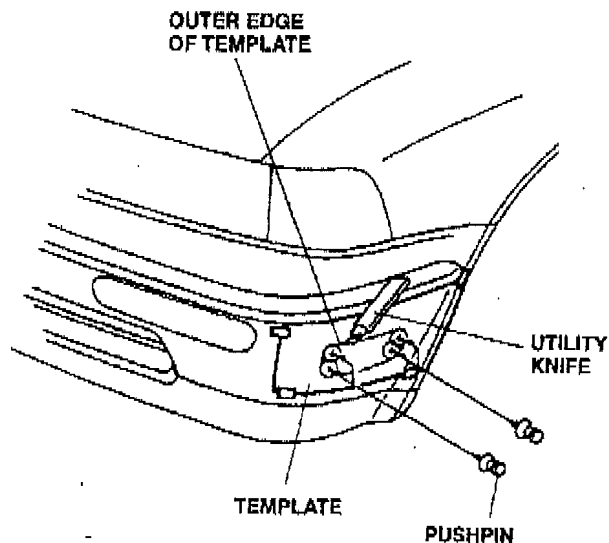

**CAUTION**

To prevent eye injury from debris, wear eye protection while drilling.


5. Using the drill and 40 mm hole saw, drill a 40 mm hole through each of the four marks previously made.
6. Cut out the marked area from the front bumper using a hacksaw blade. Repeat on the other side.

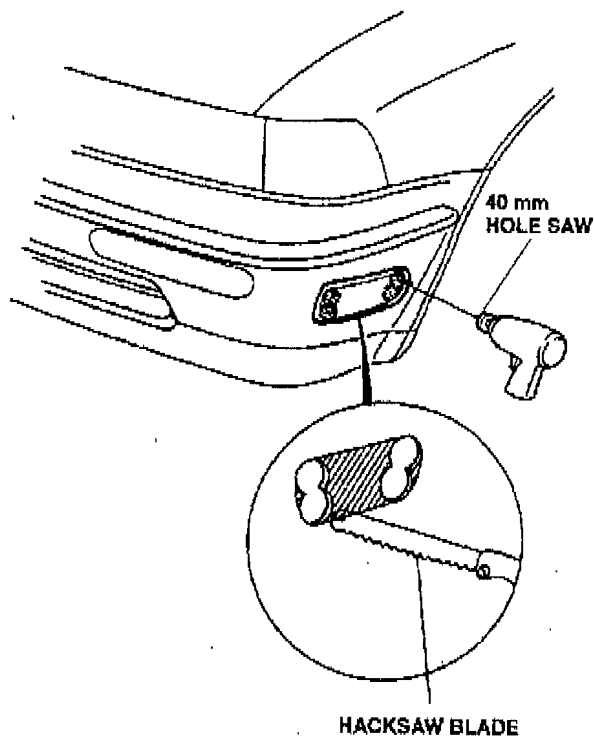

PUB No. Title  
AI B1116547 CORNERING LIGHTS


Issued  
09/01/1994

7. Route the wire harness from the kit through the inside of the front bumper, and secure it to the front grille with the wire tie in the area shown.
8. Position the control unit on the stay, and install the 6 x 20 mm flange bolt and 6 mm flange nut. Attach the control unit and stay assembly using the 8 x 14 mm washer-screw.
9. Tighten the ground terminal of the wire harness with the 6 x 12 mm ground bolt included in the kit.

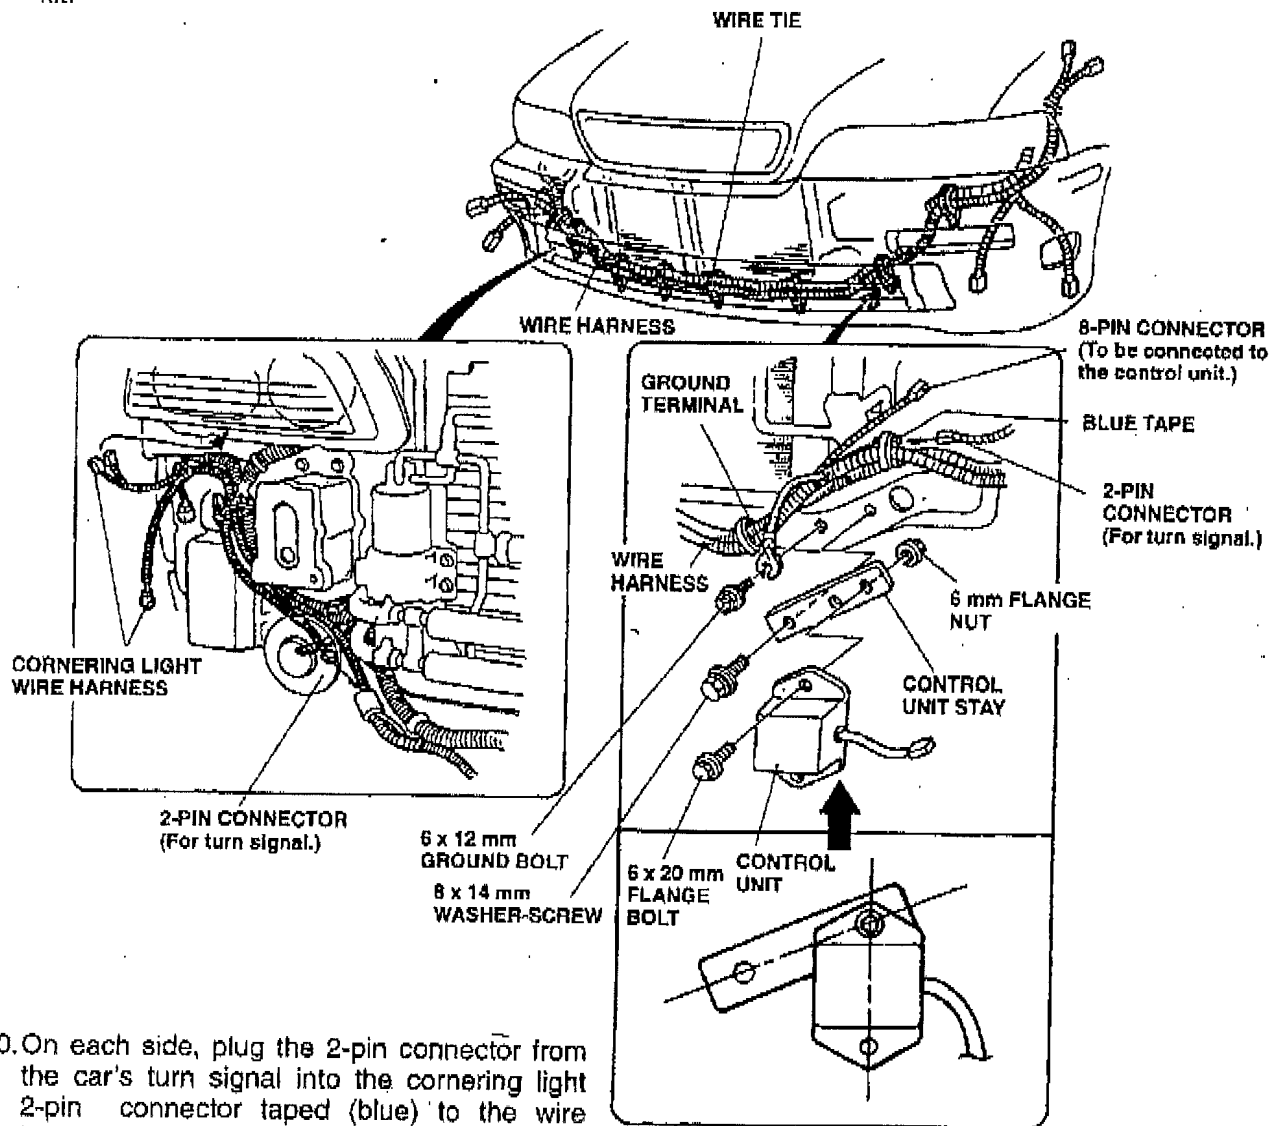


10. On each side, plug the 2-pin connector from the car's turn signal into the cornering light 2-pin connector taped (blue) to the wire harness.


11. On the passenger's side, remove the front side marker/parking light (one screw, one connector).

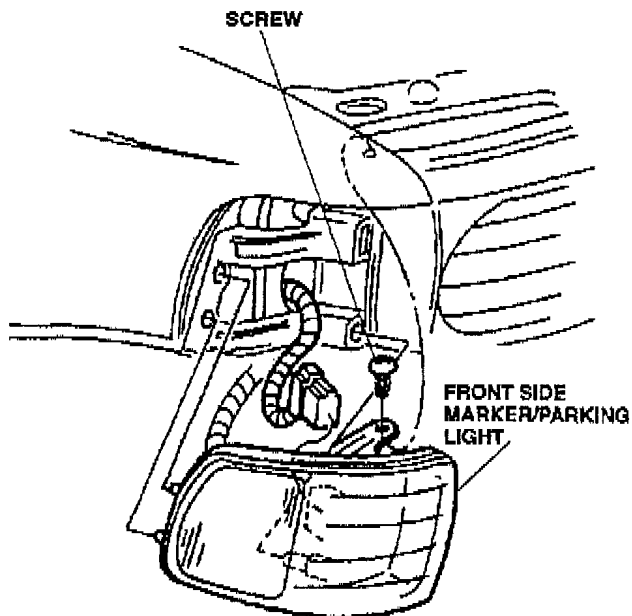


12. Unplug the connector at the front side marker/parking light, and connect the cornering lights wire harness between the two sides of the connector. Reinstall the light.

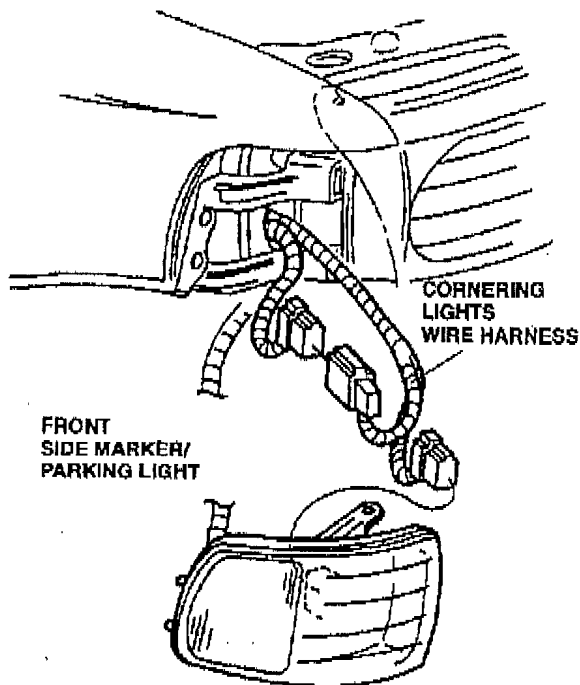


13. Disconnect the positive cable from the battery; then remove the battery holder and battery (two nuts).

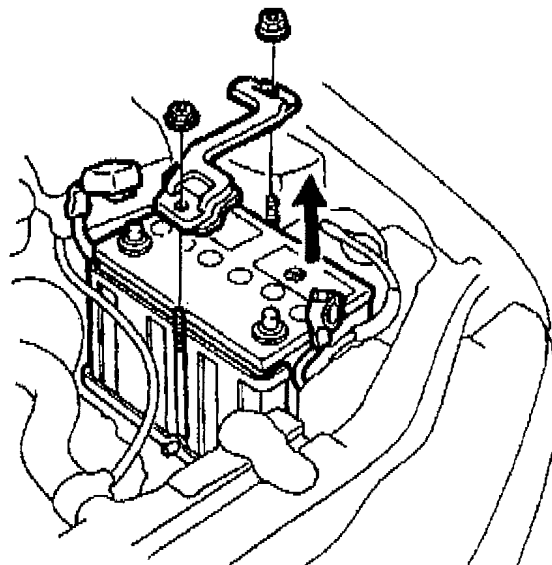


14. Remove the top cover from the under-hood fuse/relay box; then remove the under-hood fuse/relay box (two terminal bolts, two mounting bolts, one clip).

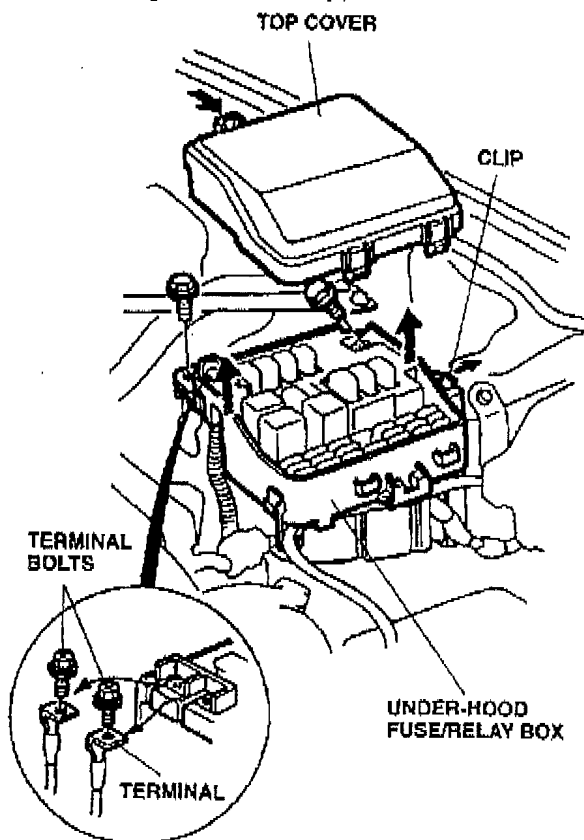


15. Remove the bottom cover from the under-hood fuse/relay box, and unplug the (brown) 5-pin connector.

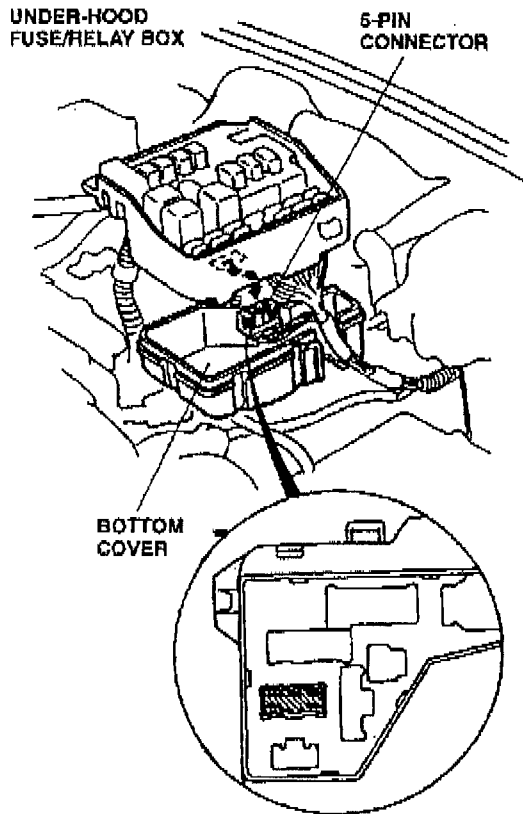


16. Route the 5-pin connectors of the cornering lights wire harness from the front bumper to the under-hood fuse/relay box; then connect the 5-pin connectors of the wire harness between the under-hood fuse/relay box and the 5-pin connector you just unplugged.

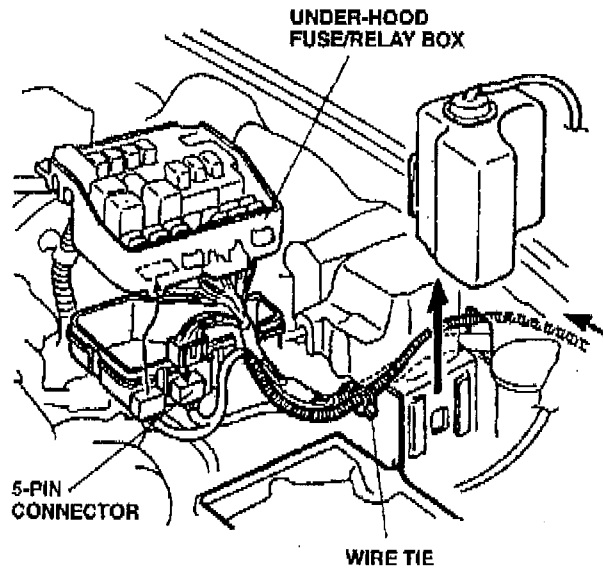

17. Loosely install the trim on the front bracket using two 4 x 12 mm screws. Repeat on the other side.

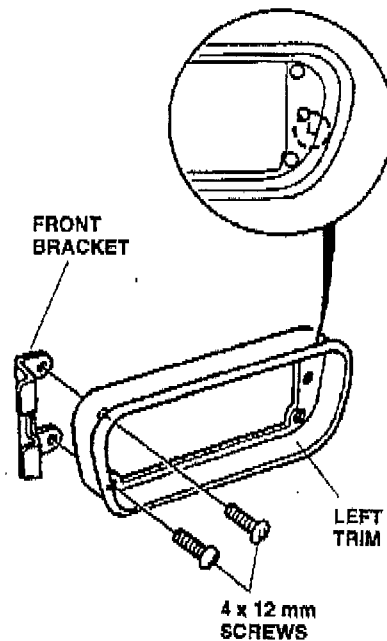


18. Fit the trim and front bracket assemblies into position in the bumper holes made in step 6. Inside the front bumper, position the two rear brackets on the trim, and install two more 4 x 12 mm screws for each.
19. Tighten all the screws securely including the four 4 x 12 mm screws you loosely installed in step 17.

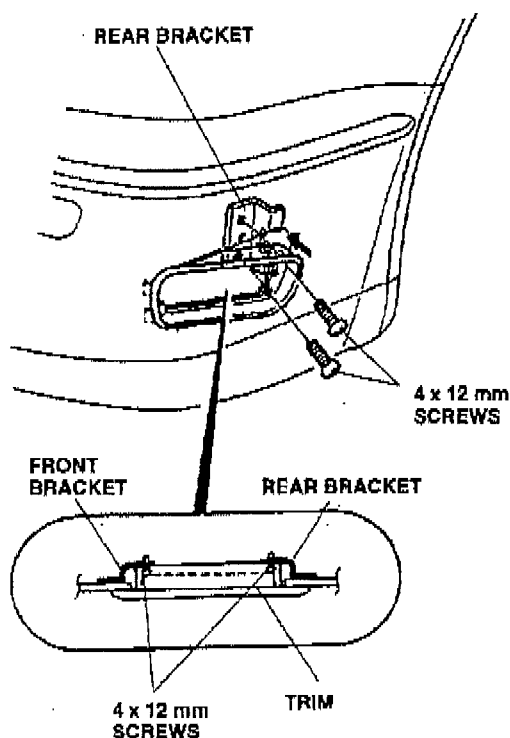

20. Connect the connectors of the wire harness to the cornering lights.

21. Slide the cornering lights into the garnishes, and install the 4 x 25 mm self-tapping screws.

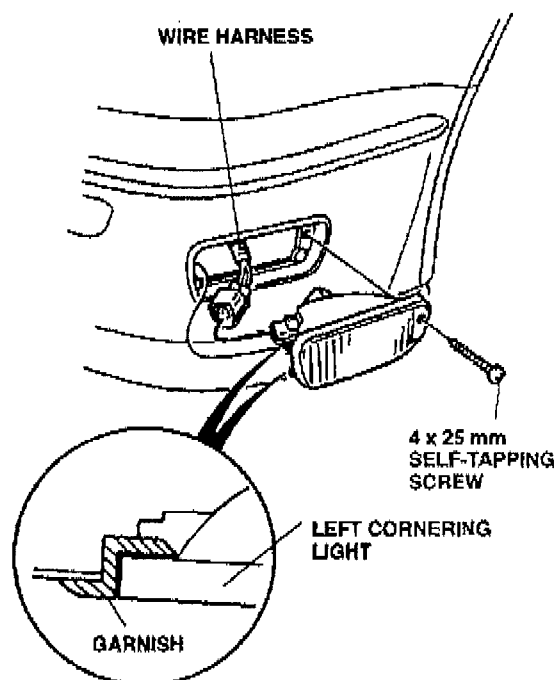

22. Check that all wire harnesses are routed properly and all connectors are plugged in.
23. Reinstall all removed parts.
24. Connect the negative cable to the battery.
25. Check the cornering lights:
  - With the headlights on, turn on the turn signals one at a time
  - Check that each cornering light comes on and stays on for a few seconds after the turn signal goes off.
26. Enter the customer's radio anti-theft code, if applicable, and reset the radio station presets.
27. Reset the clock.